

## Specifications



Item	- 01075D
Model	- LED50SOX/19K
Bulb Shape	- SOX
Beam Spread	- 120°
Input Voltage	- 100-277VAC 50/60Hz
Watts	- 50W
Base Type	- B22, Rotatable
Avg. Color Temp	- 1900K
CRI	- 80
Lumens	- 4200
Dimmable	- No
Location Rating	- Suitable for Dry/Damp Locations
Enclosed Rated	- Yes
Minimum Lamp enclosure Dimensions	- 24.0" L X 3.94" W X 3.94" H
Average Life Hours	- 50,000
Ambient Operating Temp	- -4°F to 113°F (-20°C to 45°C)
Diameter	- 2.36" (60mm)
Length	- 21.2" (539mm)
Surge Protection	- 4KV
	- Type B, ballast must be bypassed
	- Replacement for 90W SOX

## Caution

- Use only on 100-277 VAC 50/60Hz circuits. This device is not intended for use with emergency exit fixtures or emergency lights.
- This lamp is not compatible with dimmers. During installation, ensure that the power is switched off prior to connecting or disconnecting the lamp from the fixture.
- No user serviceable parts inside. To avoid electrical shock, do not disassemble the product.
- RISK OF BURN--Disconnect power and allow fixture to cool before servicing.
- To prevent injury or property damage from falling lamp, only use in fixtures that can structurally support this lamp.
- The condition of the lamp holder can affect the life hours of a bulb. Inspect the lamp holder regularly for deterioration. If deterioration has occurred, replace the lamp holder immediately before continuing operation.

## Precaución

- Use solo en circuitos de 100-277 VAC 50/60 Hz. Este dispositivo no está diseñado para su uso con dispositivos de salida de emergencia o luces de emergencia.
- Esta lámpara no es compatible con atenuadores. Durante la instalación, asegúrese de que la alimentación esté desconectada antes de conectar o desconectar la lámpara del dispositivo.
- No hay piezas reparables por el usuario dentro. Para evitar descargas eléctricas, no desarme el producto.
- RIESGO DE QUEMADURAS - Desconecte la energía y permita que el accesorio se enfríe antes de realizar el servicio.
- Para evitar daños o daños a la propiedad por la caída de la lámpara, solo use accesorios que puedan soportar estructuralmente esta lámpara.
- La condición del portalámparas puede afectar las horas de vida de una bombilla. Inspeccione el portalámparas regularmente para ver si está deteriorado. Si se produce un deterioro, reemplace el portalámparas inmediatamente antes de continuar con la operación.


## Warning

### Risk of electric shock

- Disconnect electrical power to fixture and follow proper lockout/tagout procedures before installation or maintenance. Contact a qualified electrician for installation.
- This device requires 100-277VAC input voltage.
- This device requires all ballasts, capacitors, and starters to be bypassed/removed.
- Suitable for use in damp locations. DO NOT use where directly exposed to liquid, vapor, rain.
- Added weight of the device may cause instability of a free-standing portable luminaire.
- This device is not intended for use with emergency exits.
- This device is not intended for use with a motion sensor or an infrared sensor.
- This device is suitable for use in enclosed fixtures that meet the minimum enclosure dimensions of 24.0" L X 3.94" W X 3.94" H.


### Step: 1

Remove the old ballast or disconnect it from the existing lamp holder. Remove and dispose of the ballast in a correct manner. Shown in Figure 1.

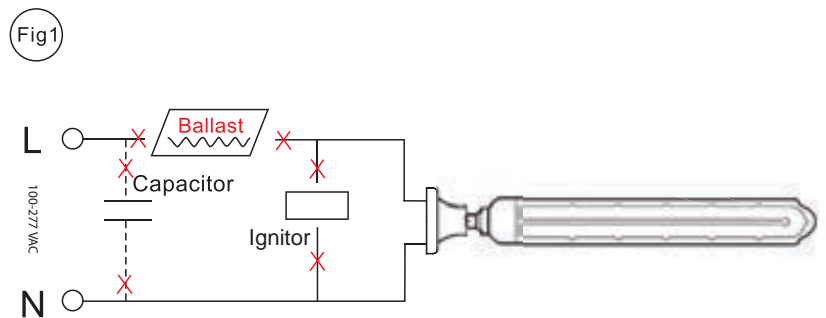

### Step: 2

Reconnect directly to the existing lamp holder. Shown in Figure 2. (100-277VAC)

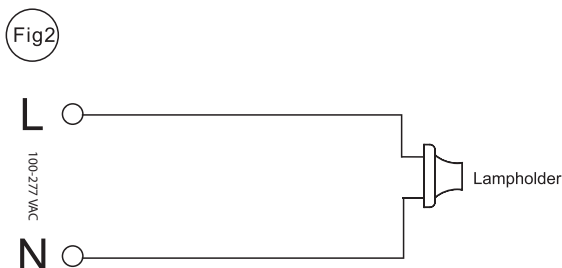

### Step: 3

Install the new LED replacement lamp. Shown in Figure 3. Please make sure the fixture is correctly grounded.

