



Illuminance at a Distance

	Center Beam fc	Beam Width	
10.0 ft	46 fc	32 ft	19.8 ft
15.0 ft	20.5 fc	48 ft	29.7 ft
20.0 ft	11.5 fc	64 ft	39.6 ft
25.0 ft	7.4 fc	80 ft	49.5 ft
30.0 ft	5.1 fc	96 ft	59.4 ft

■ Vert. Spread: 116°
■ Horiz. Spread: 89.4°

Specifications

Item	- 35707A
Model	- LED Wall Pack 120W/5K G2
Bulb Type	- LED
Watts	- 120 watts
Input Voltage	- 120-277VAC 50/60Hz
UL Rating	- Suitable for Wet Locations
Dimmable	- Yes (1-10V)
Height	- 9.15 inches (232 mm)
Width	- 14.41 inches (366 mm)
Length	- 8.75 inches (222 mm)
Kelvin Color	- 5000
CRI	- > 80
Lumens	- 14,000
Average Life Hours	- 50,000
Ambient Operating Temp.	- -40°F ~ 113°F (-40°C ~ 45°C)

Caution

- This fixture must be wired in accordance with the National Electrical Code (NEC) and applicable local ordinance. Proper grounding is required to ensure personal safety. Carefully observe grounding procedure under the installation section.
- Make certain power is OFF before starting the installation or attempting any maintenance. Risk of fire/electric shock. If not qualified, consult a licensed electrician.
- Disconnect power at fuse or circuit breaker before installing or servicing.
- RISK OF BURN - Disconnect power and allow the fixture to cool before servicing.
- RISK OF PERSONAL INJURY - Fixture may become damaged and/or unstable if not installed properly. Make sure all fixture components are securely tightened.

Precaución

- Este accesorio debe estar conectado de acuerdo con el National Código Eléctrico (NEC) y ordenanzas locales aplicables. Apropiado Se requiere conexión a tierra para garantizar la seguridad personal. Cuidadosamente observe el procedimiento de conexión a tierra en la sección de instalación.
- Asegúrese de que la alimentación esté apagada antes de comenzar la instalación o intentando cualquier mantenimiento. Riesgo de incendio / descarga eléctrica. Si no calificado, consulte a un electricista con licencia.
- Desconecte la energía en el fusible o en el interruptor de circuito antes de instalar o servicio.
- RIESGO DE QUEMADURAS: desconecte la alimentación y permita que el dispositivo se enfríe antes de dar servicio
- RIESGO DE LESIONES PERSONALES: el accesorio puede dañarse y / o inestable si no se instala correctamente. Asegúrese de que todos los accesorios. Los componentes están bien apretados.



⚠️ WARNING

To reduce the risk of electrical shock, fire, or injury to persons, read and follow all warnings and installation instructions before installing. All installation should be performed by a qualified electrician.

Risk of Electric Shock

Ensure power is off before installation or inspection. All wirings are performed in accordance with National Electrical Code (NEC) and local electrical code.

Risk of Fire

Fixtures are rated for use in 120-277V, 50-60Hz protected circuit and 221°F (105°C) rated supply wire.

FOR YOUR SAFETY

While performing installations described, gloves, safety glasses or goggles should be worn.

Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical component.

⚠️ ADVERTENCIA

Para reducir el riesgo de descarga eléctrica, incendio o lesiones a personas, lea y siga todas las advertencias e instrucciones de instalación antes de la instalación. Toda la instalación debe ser realizada por un electricista calificado.

Riesgo de shock eléctrico

Asegúrese de que la energía esté apagada antes de la instalación o inspección. Todos los cableados se realizan de acuerdo con el Código eléctrico y el código eléctrico local.

Riesgo de fuego

Los accesorios están clasificados para uso en 120-277 V, circuito protegido de 50-60 Hz y cable de alimentación con clasificación de 90 ° C.

POR TU SEGURIDAD

Al realizar las instalaciones descritas, se deben usar guantes, gafas de seguridad o gafas protectoras.

No realice o modifique ningún agujero abierto en un recinto de cableado o componentes eléctricos durante la instalación.

Para evitar el daño o la abrasión del cableado, no exponga el cableado a los bordes de la chapa u otros objetos afilados.


No modifique, reubique ni quite el cableado, los portalámparas, la fuente de alimentación ni ningún otro componente eléctrico.

Installation


1. Open the fixture.
2. Unplug the wire connecting parts A and B.
3. Separate parts A and B and set part A aside.
4. Prepare the back plate for mounting by drilling or knocking out the appropriate holes.
5. Route the input wire through the gasket and then the hole of part B.
6. Connect the wire with power input line by 3 connectors, refer to the wiring diagram. (L for black, N for white, and G for green)
Please keep the circuit open during this process.
7. Put part A back onto the hinge of part B.
8. Check that the hinge is secure.
9. Connect the wire back from part A to part B.
10. Close the fixture.
11. Tighten it securely.

Instalación

1. Abra el dispositivo.
2. Desenchufe el cable que conecta las partes A y B.
3. Separe los pares A y B y reserve la parte A a un lado.
4. Prepare la placa posterior para el montaje taladrando o golpeando los agujeros apropiados.
5. Pase el cable de entrada a través de la junta y luego el orificio de parte B.
6. Conecte el cable con la línea de entrada de alimentación mediante 3 conectores, consulte el diagrama de cableado. (L para negro, N para blanco y G para verde) Mantenga el circuito abierto durante este proceso.
7. Vuelva a colocar la parte A en la bisagra de la parte B.
8. Compruebe que la bisagra esté segura.
9. Conecte el cable de vuelta de la parte A a la parte B.
10. Cerrar el aparato.
11. Apriete bien.

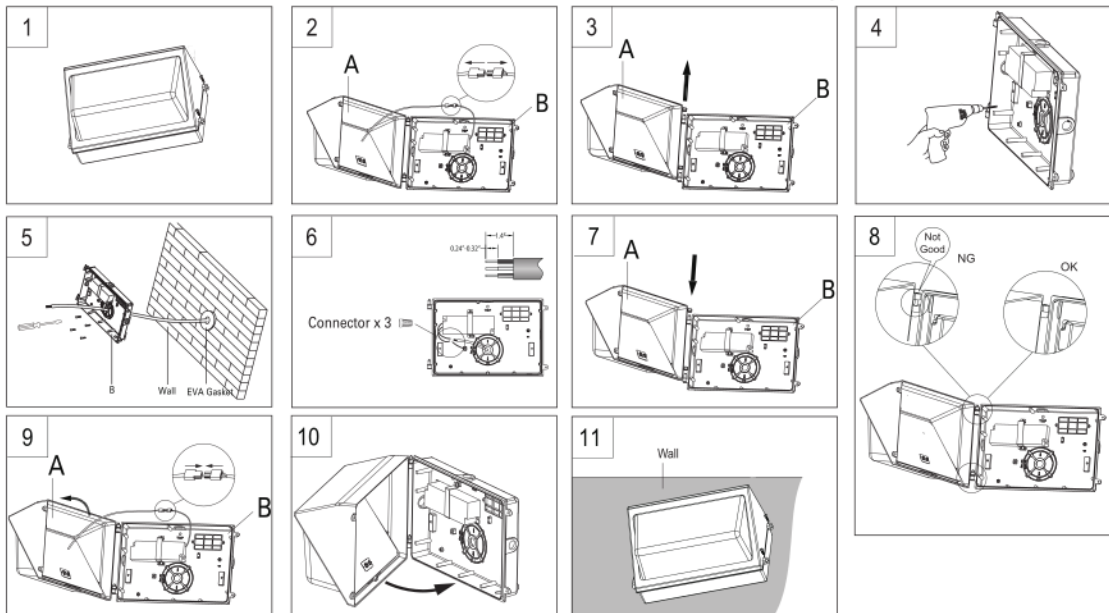

Input Voltage - 120-277VAC - 50-60Hz

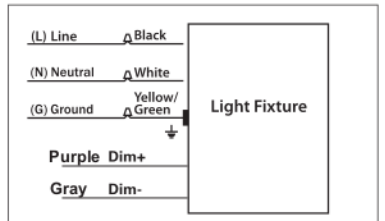

Wiring Diagram
(Dimming wire optional)