

# 35694C LED EMERGENCY COMBO - ROUND WET LOCATION

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

### Mounting Instruction

1. Loosen two screws on the housing to remove the lamp cover and the unit.
2. Mount housing onto J-BOX and secure with screws. Drill a hole on the back of the housing to pull the input wires out. (See Fig A) Connect wires through J-BOX. (See Fig A)
3. Connect battery only after continuous AC power can be provided to the unit. (See Fig B)
4. Place the unit back into the housing. Replace the lamp cover and screw back on to the housing. (See Fig C)
5. Apply continuous AC power refer to Fig 1. Press "TEST" button to check for proper operation of the unit.

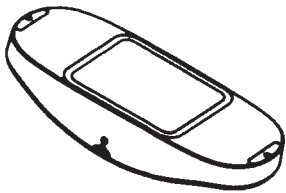


Fig A: J-BOX

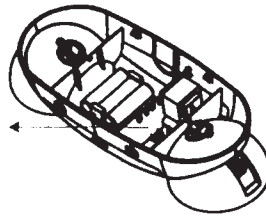


Fig B

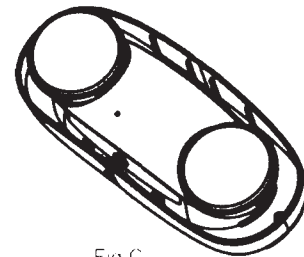


Fig C

### OPERATION:

1. Apply AC power to the unit. The Led indicator should turn red.
2. After the battery has been left to charge for 2 hours, test the unit by pushing the switch. The Led indicator turns OFF and the lamps on the unit turn ON.
3. When the switch is released, the lamp turns off and the Led indicator turns back to Red.

**SAVE THESE INSTRUCTIONS**  
and deliver to owner after installation